



Step 1: Getting Started (For USB Cable)

Installing the scanner to the Host System

 
1. Connect the USB cable of MS340 to the USB port on your host PC.
2. After six beeps, MS340 is successfully connected with your host PC, then the driver will be started to install automatically.
3. Please go to step 2: Test & Finish.

Step 2: Test & Finish

Please scan the following barcode. If the word "unitech" appears on your screen, the scanner has been successfully installed.




Set All Defaults**



Tips for Switching Cable

Before removing the cable from the scanner, it is recommended that the power on the host system is off and the power supply has been disconnected from unit.

 1. Find the small "Pin-hole" on the bottom of the unit.
2. Use a bended regular paperclip and insert the tip into the hole.
3. You will hear a "click", then gently on the strain-relief of the cable and it will slide out of the scanner.

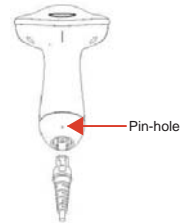

Configuration Flow Chart

(Please scan the following barcodes for configuration)

① Scan Start of Configuration.



Start Configuration

② Scan all necessary labels for parameters that meet applications.

Interface Selection
RS232 Mode Parameters
Reading Mode Selection
Symbologies Selection

③ Scan End of Configuration to end the programming.



End Configuration

④ To permanently save the settings by your programmed, just scan label for Save Parameters.



Save Parameters

Interface Selection

USB*



Keyboard



RS232



Virtual COM



Reading Mode Selection

Trigger ON / OFF*



Presentation



Flash



Good Read OFF



Flash / Auto Power On



Testing



Continuous / Auto Power ON



Continuous/Trigger OFF



* : Default Option

** : Quick Setting Label

The function can be executed directly by scanning barcode instead of following the configuration flow chart process.

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.

Version 1.1
401187G

Select Terminator

CR*



Space



STX-ETX



CR+LF



HT (TAB)



LF



None



RS232 Mode Parameters : Set Up BAUD Rate

9600*



1200



2400



4800



19200



38400



Language Selection

US English*



UK English



Italian



Spanish



French



German



Swedish



Switzerland



Hungarian



Japanese



Belgium



Portuguese



Denmark



Netherlands



Turkey



* : Default Option

** : Quick Setting Label

The function can be executed directly by scanning barcode instead of following the configuration flow chart process.

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.